

How often must I have the new tank pumped?

The grinder pump tank requires no other pumping beyond that which the grinder does periodically when the effluent volume activates the pump. All maintenance on the grinder pump collection system will be done by the sewer district. The property owner is responsible for adhering to the basic regulations as to what can and cannot be put into the sewer. Also, when damage to the system is caused by the actions of a private individual, the cost of repair may accrue to the property owner.